 


Electronic Scale Instruction Manual

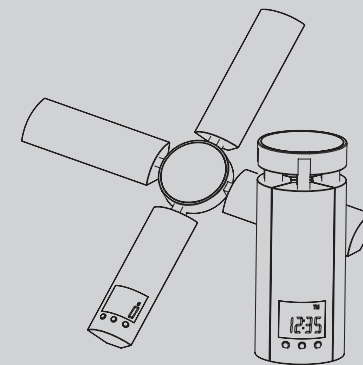

CHANGE UNIT OF MEASUREMENT:

Under the weight mode, press the "UNIT" key to chose the unit "g" for grams or "oz" for ounces.



OVER-LOAD INDICATOR:

When the scale is over loaded (more the 3000g or 105.6 oz). "Err" will appear on the display.





LOW POWER INDICATOR:

When the Display indicates "▲/■" open the battery door and replace the battery with a new one.



OPERATING PRECAUTIONS

1. Do not use or store this scale in areas exposed to temperature extremes, strong magnetism, strong vibration or strong impact.
2. Heat can shorten battery life and cause malfunction. Keep the scale away from heaters and direct sunlight when using it.
3. Never use the scale in a bathroom or any other areas subject to high humidity.
4. Never try to take the scale apart. Doing so can cause malfunction.
5. To clean the scale, use a soft dry cloth or a cloth moistened in a solution of water and a mild neutral detergent. Wring out all excess moisture from the cloth. Never use thinner, benzene, alcohol or other similar agents.
6. Keep your manual and all information handy for future reference.

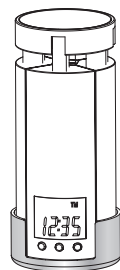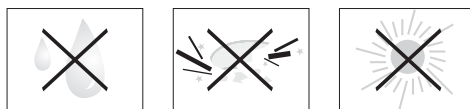

A. NOTE

Some products come with batteries already installed. In such cases, an insulator sheet is inserted between batteries and contacts to avoid consumption of battery power. Be sure to remove the insulator sheet before using the product.

B. IMPORTANT

- Keep batteries away from children. If a battery is accidentally swallowed, contact your physician or local poison control center immediately.
- If batteries leak, carefully wipe out the interior of the battery compartment while taking care to avoid any battery fluid coming into contact with your skin.
- Make sure the positive (+) and negative (-) sides of the batteries are facing correctly when inserting them.
- The batteries that come with the timer are not chargeable. Never try to charge them.
- Replace the batteries at least once a year, even if the current batteries are working properly.
- Slowed or stopped timekeeping indicates low battery power. Do not leave the batteries in the timer after these symptoms appear. Replace batteries as soon as possible.
- The batteries that come with the timer may lose their power during transport and storage.

SPECIFICATION


- Equipped with a high precision strain gauge sensor system.
- Foldable scale body
- With electronic clock and count down timer
- Capacity: 3,000g/105.8oz
- Min. Effective: 20g/0.7oz; Division: 1g/0.1oz
- Over-load / lower power indicator
- Weight unit: g-oz
- Tare function

Power Supply

Battery: 2x1.5V AAA battery

PRIOR TO FIRST USE

Turn the scale over; the battery compartments are located on the back of the scale. Open the battery compartments and insert the battery with the correct polarity.

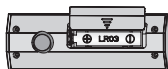

OPERATION

1. Slightly unfold the scale and put it on a hard flat surface. (Please make sure all 4 legs stand firm on the hard surface.)
2. Put a hard container (≥Φ150mm) such as a plate on the scale and make sure it is centered. The base of the container should make contact with the scales four legs. (A glass platform is recommended)
3. Press the key of "ON/TARE", the LCD display will show zero after "HELO" appears. Now it enters the weighing mode.



4. Put the food on the container, the LCD Display will show the food weight.
5. When finished weighing, press the "MODE" key to return to time mode.
6. Fold Scale and place into Storage base after use.



NOTE:

- 1) Under weight mode, if the scale is not used for 60 seconds, the system will enter into time mode automatically.
- 2) Place goods in the middle of container to ensure accurate readings.
- 3) Do not put Food directly on the scale.



TARE (zero resetting):

Step 1: Under weight mode, put the container on the scale, the LCD Display will show the weight of the container.



Step 2: Press the "ON/TARE" button, after 2 seconds the LCD Display with reset to ZERO (clearing the weight of the container), then place the food into the container. The LCD Display will show the weight of the food only. Press the "ON/TARE" button again to "ZERO" the weight and add other foods/ingredients.



TIME SETTING:

When the system is under time mode, hold "MODE" key for at least 3 seconds to enter the setting mode



'Minute' will flash on the LCD

Press "UNIT" to set the 'minute'



Press "MODE" again, the 'hour' will flash on the LCD.



Press "UNIT" to set the 'hour'



When finished, press "MODE" key to finalize and return to Time Mode.



NOTE:

If there is no operation for 20 seconds under time setting mode, the system will enter into the Time Mode automatically.

COUNTDOWN TIMER SETTING:

Step 1: When the system is under time mode, press the "MODE" key once to enter the timer setting.



Step 2: Hold the "MODE" key until the 'second' digits flash on the LCD Display



Step 3: Press the "UNIT" key to set the desired countdown second.



Step 4: Press the "MODE" key again, the 'minute' will flash on the display



Step 5: Press the "UNIT" key to set the desired countdown minute.



Step 6: Once the desired countdown time has been set, press the "MODE" key to start counting down.



When counting down time is over, "00:00" will appear on the display and the alarm will ring. Press "MODE" to stop the alarm.



NOTE:

If there is no operation for 20 seconds under timer setting mode, the system will enter into the Time Mode automatically.